


# How to assemble a COMP1 Air Compressor

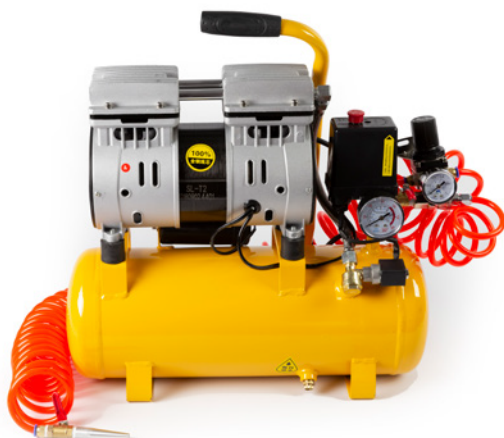


Box Contents:  
1x Compressor  
1x Airline/Trigger  
1x Air Filter  
4x Rubber Feet | Nuts & Bolts

## Operation Instructions:

- 1) Plug into electrical supply
- 2) Turn on by pulling red button upwards
- 3) Allow tank to fill with air
- 4) Open red valve on airline quick release female fitting
- 5) Valve at end of airline controls air flow
- 6) Pressure can be regulated by control valve on the airline

1

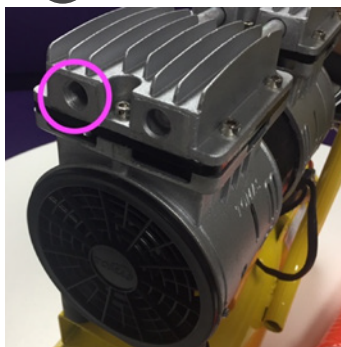


Locate the threaded hole. Top left hand side of the compressor

2



Screw the air filter into this threaded hole and tighten by hand only

3

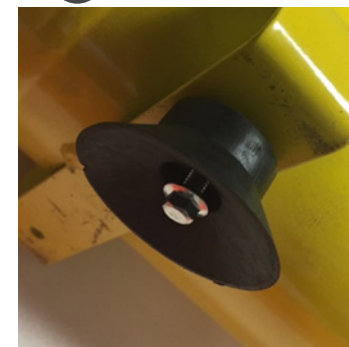

Fit the four rubber feet with four bolts/nuts and tighten with a spanner/socket

4



Remove the quick release female fitting from airline and screw onto output on right hand side of compressor. Tighten with a spanner. Do not overtighten.

5



Insert male quick release fitting on the end of the airline into the female fitting in step 4.